

## FIXING GUIDE FOR CLOUDSORPTION ACOUSTIC PANELS USING SPIRAL HOOKS.


### Installation.




**STEP 1** - Use clean white gloves to keep the panels free of any dirt marks during installation. Mark the appropriate number of positions on the back of the panels for the spiral hook to evenly support the acoustic panel.



**STEP 2** - Screw the appropriate number of spiral hooks into the marked positions through the back of the acoustic panel.

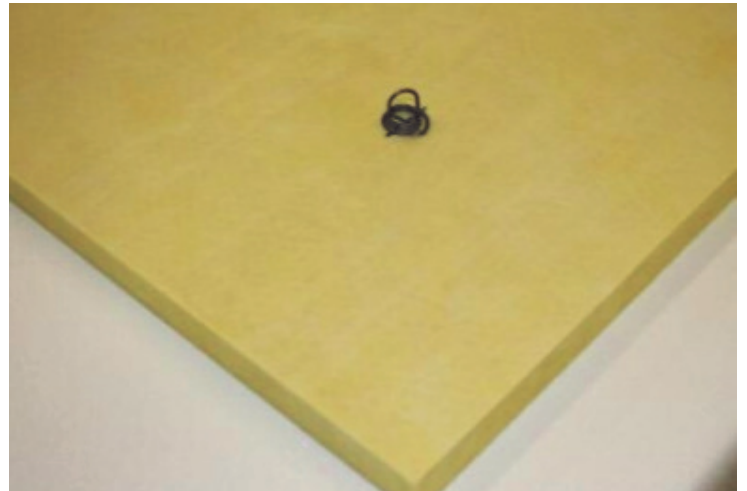

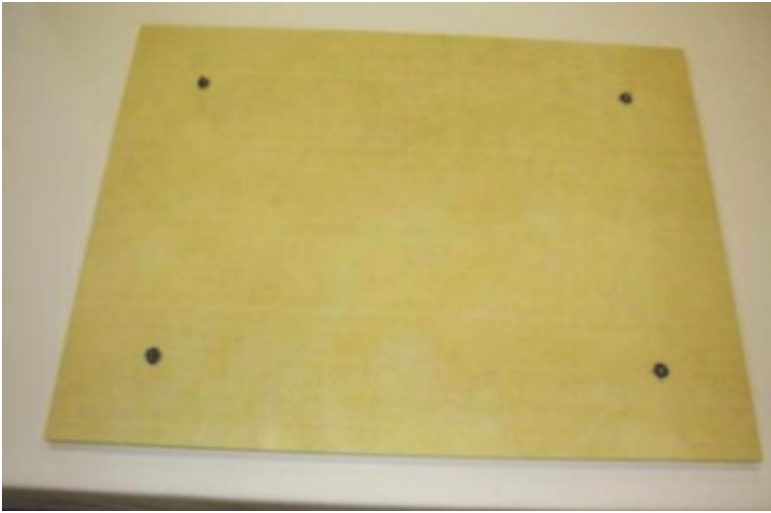

**STEP 3** - Install appropriate fixing bolts on the structural ceiling and align them with the position of the spiral hooks on the rear of the acoustic panels. This item is not supplied.



Eye Bolt



Tie Wire Bolt



**STEP 4** - Use the appropriate steel cable or chain to hang the panels from the structural ceiling fixings and to the spiral hooks at the rear of the panels. This item is not supplied.

**STEP 5** - Adjust the height of the cable or chain to suit the depth of the suspension required and ensure that the panels are horizontal and level using a spirit level.

**Sound Service (Oxford) Ltd, Crawley Mill, Witney, OXON, OX29 9TJ**  
**Tel: 0845 363 7131 Fax: 0845 363 7151**  
**[www.soundservice.co.uk](http://www.soundservice.co.uk)**