


## Install Guide for Quietfloor

### Preparation

The floor to be treated should be examined and any loose floorboards should be firmly secured with screw fixings. It is also extremely beneficial to seal the joints of the existing floor with our Acoustic Sealant followed by our mineral loaded sound barrier mat SBM5. No mechanical fixings required but for best results, the SBM5 should be glued down. SBM5 can simply be laid over the floor surface wall to wall with the edges butt jointed. Our jointing tape can be used to seal the joints before installation of any carpet.

### Installation

Quiet-Floor is simply loose laid on the floor. It is essential that the thinner barrier layer is on the bottom of the panel when placed in position. It is also essential the panels are laid in a staggered; brick type pattern and that they are butted tightly together over the entire floor surface and secured with our jointing tape. If SBM5 has been applied first, carpet grippers should be fixed in the normal manner directly on top of the SBM5. The Quiet-Floor can then be installed in exactly the same way as normal carpet underlay. If our Soundproofing Mat (SBM5) has not been used, Quiet-Floor should be installed right up to the skirting boards and the top layer of barrier mat and foam cut back with a sharp craft knife to allow fitting of the carpet grippers. The grippers can then be screwed or nailed into their normal positions before fitting of the carpet commences.

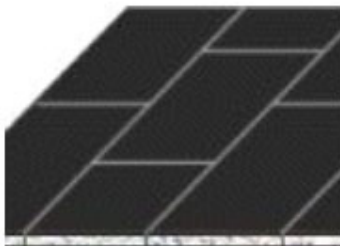

**The contractor shall be responsible for the examination and acceptance of all conditions and project suitability prior to the acoustic tile installation.**

To finish, seal over the joins with our Jointing TAPE.

EST. 1969

Crawley Mill, Dry Lane, Witney, Oxfordshire, OX29 9TJ  
sales@soundservice.co.uk

VAT NO: GB 434 5018 73 REG NO: 960986



Tel: 0845 363 7131  
Fax: 01993 779569