


## Install Guide for Steelsorption

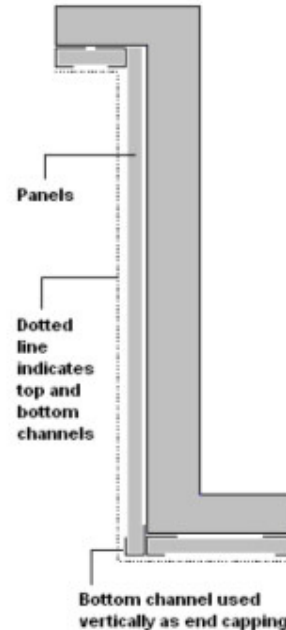

### **Walls:**

Use a spirit level to align all horizontal and vertical surfaces. Odd leg 'U' channels are plugged and screwed to the wall. Insert the panel into top channel and push panel flush to wall then lower into bottom channel. Use bottom channels vertically as capping to cut wall ends.

### **Ceilings:**

Odd leg 'U' channels are plugged and screwed to the soffit. Insert the panel into top channel and push panel flush to soffit – then slide into bottom channel. Use bottom channels as capping to cut ends. Use pop-rivets or screws to hold panels at ends as required.

### **CUTTING**

Perforated metal panel facing can be cut using metal snips and insulation core with a sharp knife.

### **MAINTENANCE**

Panels can be wiped with a clean cloth.

EST. 1969

Crawley Mill, Dry Lane, Witney, Oxfordshire, OX29 9TJ  
sales@soundservice.co.uk

VAT NO: GB 434 5018 73 REG NO: 960986



Tel: 0845 363 7131  
Fax: 01993 779569

