

Pictorial Guide to Installation of QuietFloor PLUS

1.



For best results, glue or loose lay SBM5 Soundproofing Mat over the entire floor area to seal up the joints (optional)

2.



When the floor is entirely covered with soundproofing mat, tape all of the joints using our jointing tape

3.



Perimeter Strips are required to pack up the carpet grippers and to allow for the extra thickness of QuietFloor PLUS

4.




Screw down Perimeter Strips around the edges of the room. The carpet grippers are installed on top of these to allow for the extra thickness of the QuietFloor PLUS

5.



Perimeter Strips ready for fixing around the edges of a room

6.

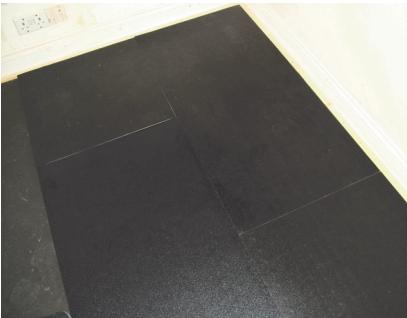

Once the perimeter strips have been fixed, install QuietFloor PLUS panels with the joints tightly butted together

7.



Once the QuietFloor PLUS has been installed, tape up the joints using our jointing tape to ensure the joints remain tightly butted. Now the carpet can be installed directly on top with no additional underlay.

For a more detailed installation guide please see the QuietFloor PLUS page on our website.